


Series load cells: CBL - CBX - CX

Up to 15000 kg application range

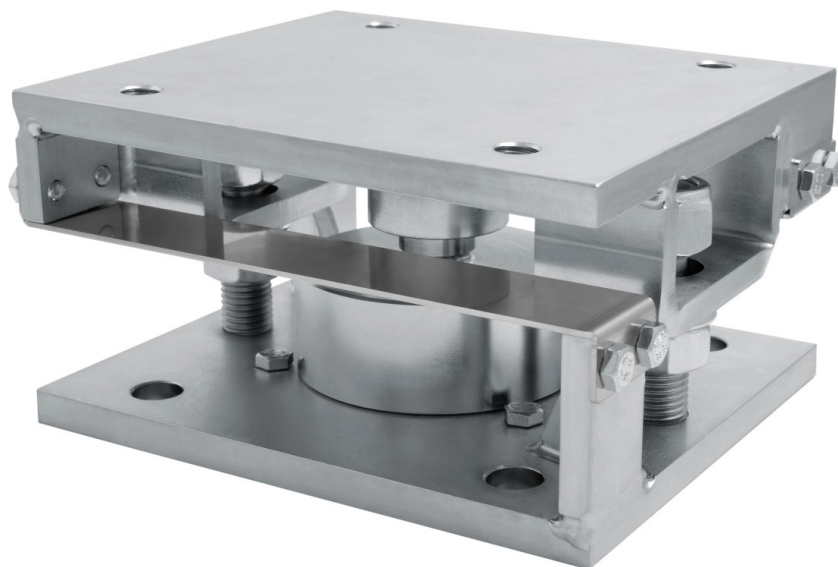


| MAX STATIC LOAD | kg | FOR LOAD CELLS | NET WEIGHT (kg) | CODE |
|-----------------|----|---|-----------------|--------|
| 15000 | | CBL (250 ÷ 12500 kg) - CBX (15000 kg) CX (1000 ÷ 15000 kg) | 5.7 | Z10000 |

Load cell not included.



DESCRIPTION

- Upper and lower plates in galvanized S355JR construction steel.
- AISI 304 stainless steel laminas against lateral forces.
- Anti-tilt constraint consisting of two threaded rods with self-locking nut.

HORIZONTAL CONSTRAINTS
ORIENTATION
IN STRUCTURES WITH
3-POINT SUPPORT

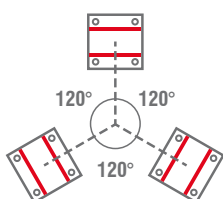



HORIZONTAL CONSTRAINTS
ORIENTATION
IN STRUCTURES WITH
4-POINT SUPPORT

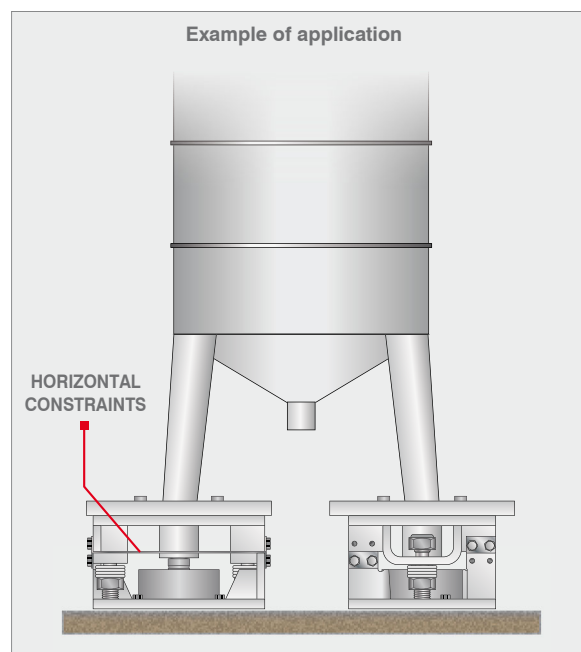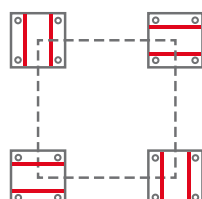

DIMENSIONS AND TECHNICAL SPECIFICATIONS

Upper and lower plates **2** must rest completely on not deformable surfaces. To ensure the stability of the structure, the system designer must predict any further precaution against side shifts and anti-tilt in function of: knocks and vibrations, wind effect, seismic conditions and hardness of support structure.

- Install the weighed system using only the mounting kit without the load cell **1** and inserting in its place a piece of pipe (1-2 mm higher than the load cell).
- To finish the installation (weldings, etc..), remove the piece of pipe and then removing the bolts to fix the the load cell **7** insert the load cell **1** in mounting kit.
- Connect lower and upper plates **2** to the earthing system then loosen nuts **5**; verify that the threaded rod **4** slides into the hole; turn anti-tilt nuts **6** to a distance of 1 mm from plate.
- Tighten the three bolts to fix the load cell **7**.

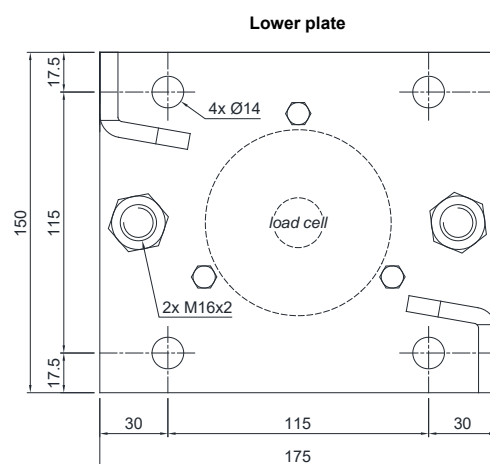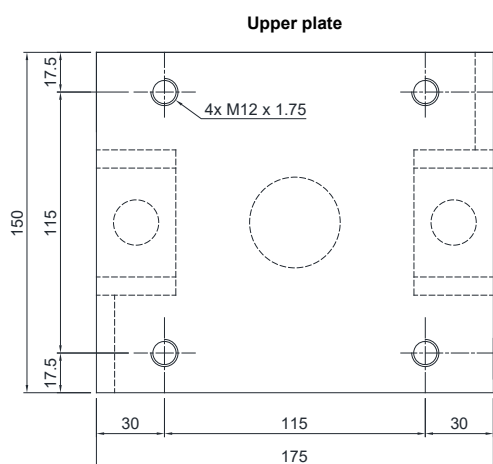

- 1** Load cell.
- 2** Upper and lower plates in galvanized S355JR construction steel.
- 3** AISI 304 stainless steel laminas with horizontal constraint function.
- 4** Threaded rod.
- 5** Nut to be used as jack.
- 6** Anti-tilt self-locking nut.
- 7** M6 bolts to fix the load cell.

